


EVO RACE FMIC INSTALLATION INSTRUCTIONS



- 1) REMOVE FRONT BUMPER
- 2) REMOVE OLD FMIC AND PIPING
- 3) SLIGHTLY BEND POWER STEERING LINES UPWARD BY HAND OR WITH PRYBAR ON PASSENGER SIDE TO GAIN CLEARANCE FOR MOUNTING BRACKET

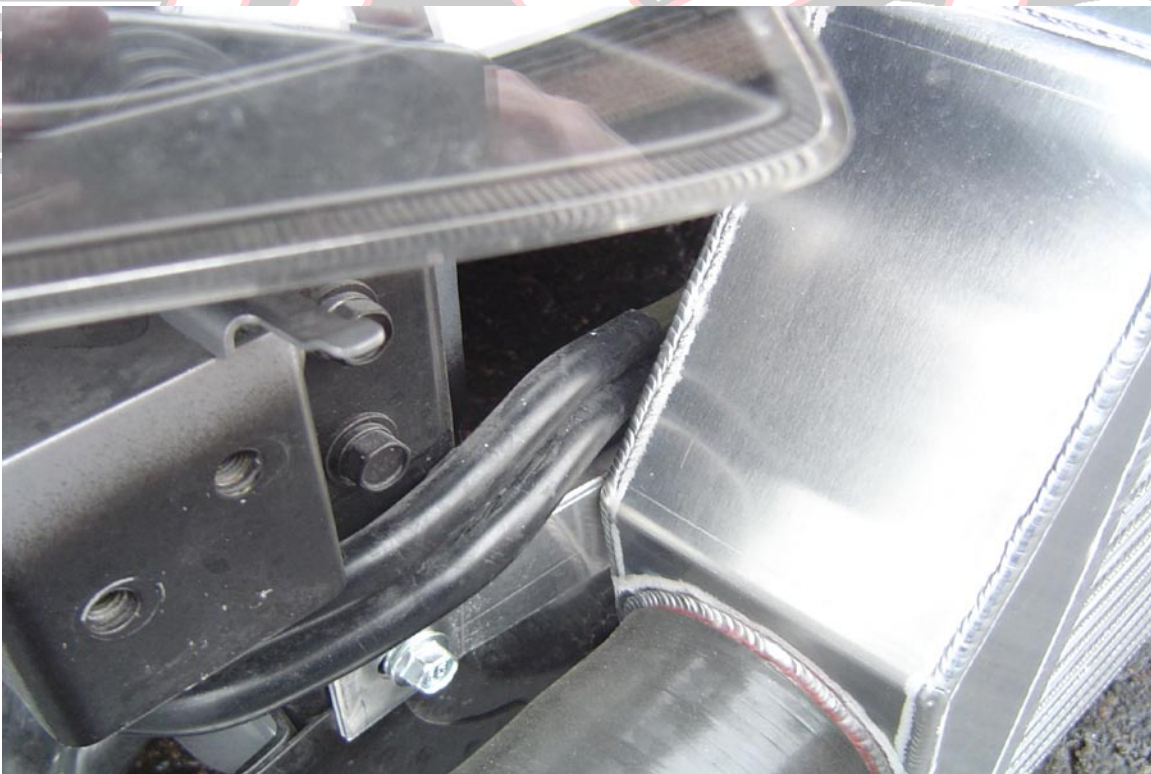


4) INSTALL AMS RACE FMIC AND PIPING

- 3" SILICONE THAT IS 4" LONG GOES ON THE LOWER END OF THE BOV SECTION OF THE UICP



- BE CAREFUL TIGHTENING T-BOLS CLAMPS.....IF TIGHTENED TOO MUCH THEY WILL CRUSH PIPES

- INSTALL STRAP BRACKETS FROM I/C PIPING TO ENDTANKS

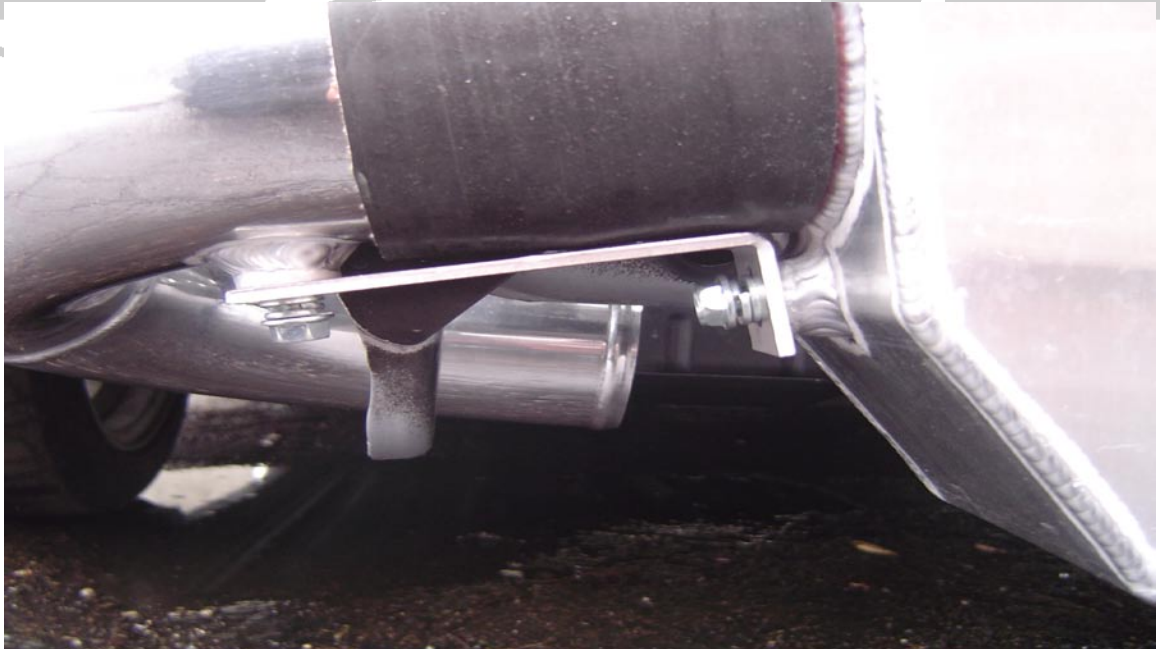

5) CUT FRONT BUMPER TO CLEAR I/C PIPES



NOTE: STOCK BUMPER SUPPORT CAN **NOT** BE USE WITH AMS RACE FMIC

6) BE SURE TO PERFORM A BOOST PRESSURE TEST BEFORE STARTING THE CAR

EMME