


P/S Removal Kit Instructions


Remove P/S pump, bracket, and lines going to P/S gear. Also, you can remove P/S cooler and reservoir.

Remove upper bolt from bracket & install pulley as shown in picture below.

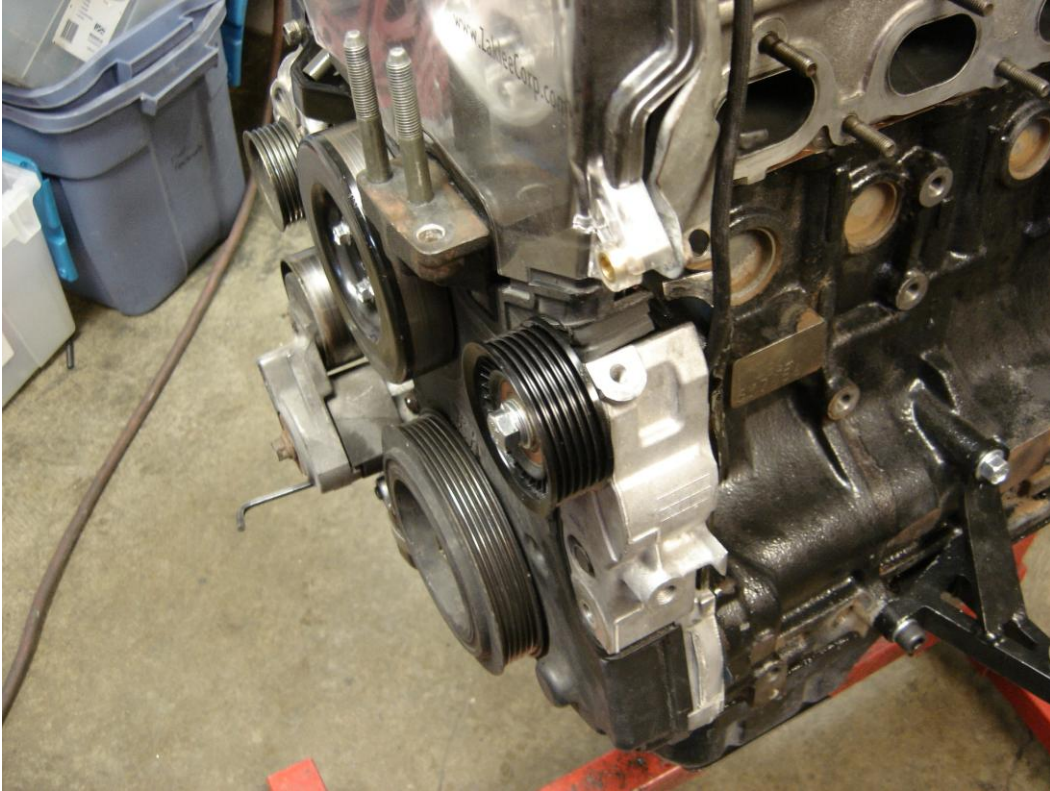

Reinstall new serpentine belt.

Remove banjo fitting at steering gear & save bolt & washers. Install barbed banjo fitting reusing bolt & washers.

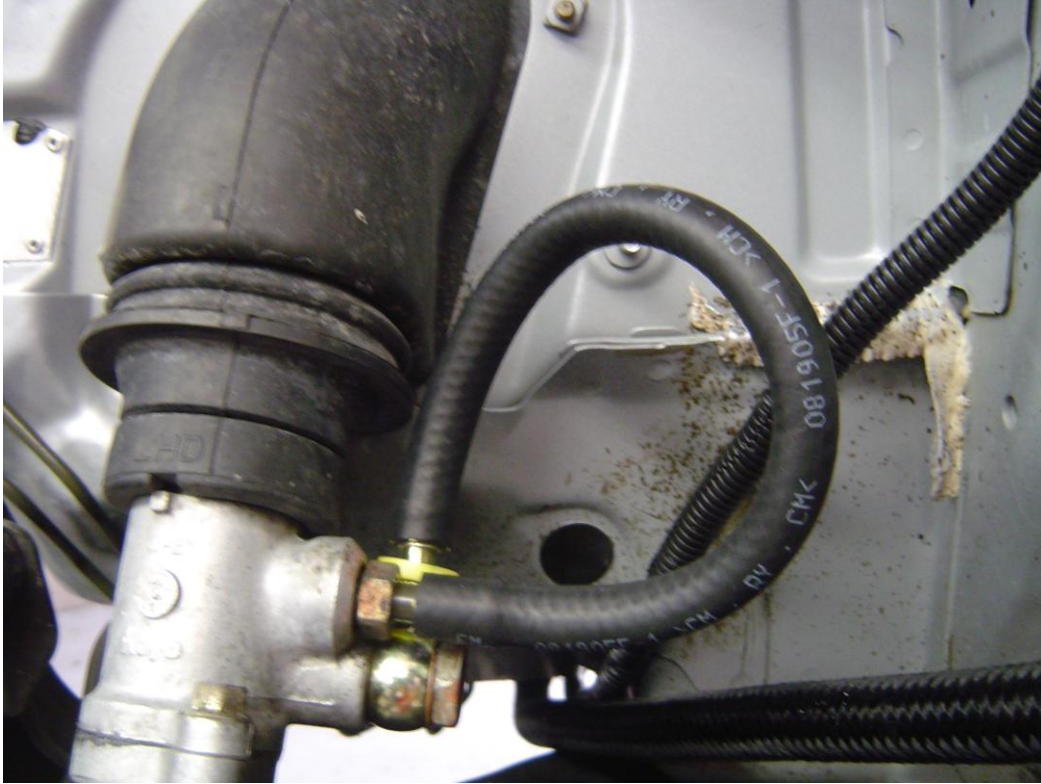

Loop 3/8 hose from barbed fitting to barbed banjo fitting & secure w/supplied clamps.

