



09+ Ralliart Front Brake Kit

The goal of AMS is to provide the highest quality, best performing products available. By utilizing research and development, and rigorous testing programs AMS will never compromise the quality or performance of our products. In addition, AMS will only provide the finest customer service offering only parts and advice that are in the best interests of the customer. AMS was built on a foundation of integrity. This is who we are; this is what you can count on.

A vehicle modified by the use of performance parts may not meet the legal requirements for use on public roads. Federal and state laws prohibit the removal, modification, or rendering inoperative of any part or element of design affecting emissions or safety on motor vehicles used for transporting persons or property on public streets or highways. Use or installation of performance parts may adversely affect the drivability and reliability of your vehicle, and may also affect or eliminate your insurance coverage, factory warranty, and/or new OEM part warranty. Performance parts are sold as-is without any warranty of any type. There is no warranty stated or implied due to the stresses placed on your vehicle by performance parts and our inability to monitor their use, tuning, or modification.

These instructions are provided as a guide only as there are many variables that cannot be accounted for concerning your particular vehicle, including but not limited to model year differences, model differences, the presence of non-OEM parts, and modifications that may already be or were previously installed. A basic knowledge of automotive parts and systems is helpful but a better understanding of the parts and systems on your particular vehicle may be required.


If you have any questions or issues at any time during the installation of your AMS product(s) please call us for technical assistance. The AMS tech line can be reached M-F, 9AM-PM Central time at 847-709-0530 for AMS products only.

Packing List:

- 2 – Calipers
- 2 – Rotors
- 1 – Set of Brake Pads
- 2 – Brake Lines
- 2 – Adaptor Brackets
- 2 – OEM Brake Line to SS Line Adaptors
- 2 – Brake Line to Caliper Adaptors
- 4 – Caliper to Bracket Bolts
- 4 – Caliper to Bracket Washers


Installation Instruction:

1. Remove the factory brake calipers, rotors and brake lines.
2. Install the brake caliper adaptor as shown below using the OEM caliper bolts.

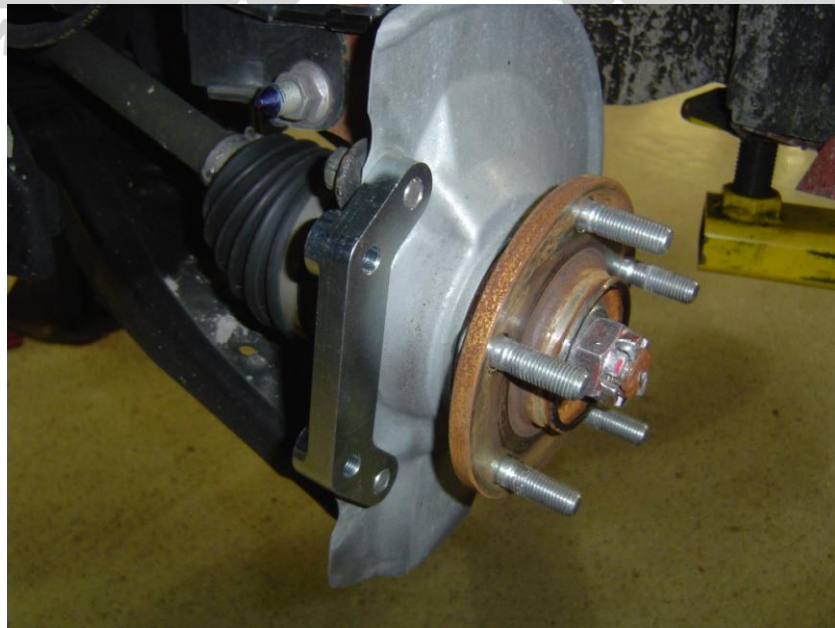

3. Install the brake rotors.

4. Install the 1/8npt to -3 adaptors onto the brake calipers, it is highly recommended to use a Teflon paste to prevent any leaks on the 1/8npt side, the -3 side does not need any additional sealant.
5. Install the calipers onto the adaptors using the supplied bolts and washers.
6. Install the brake pads into the calipers.
7. Install the hard line to ss line adaptors as shown below using the factory clip.

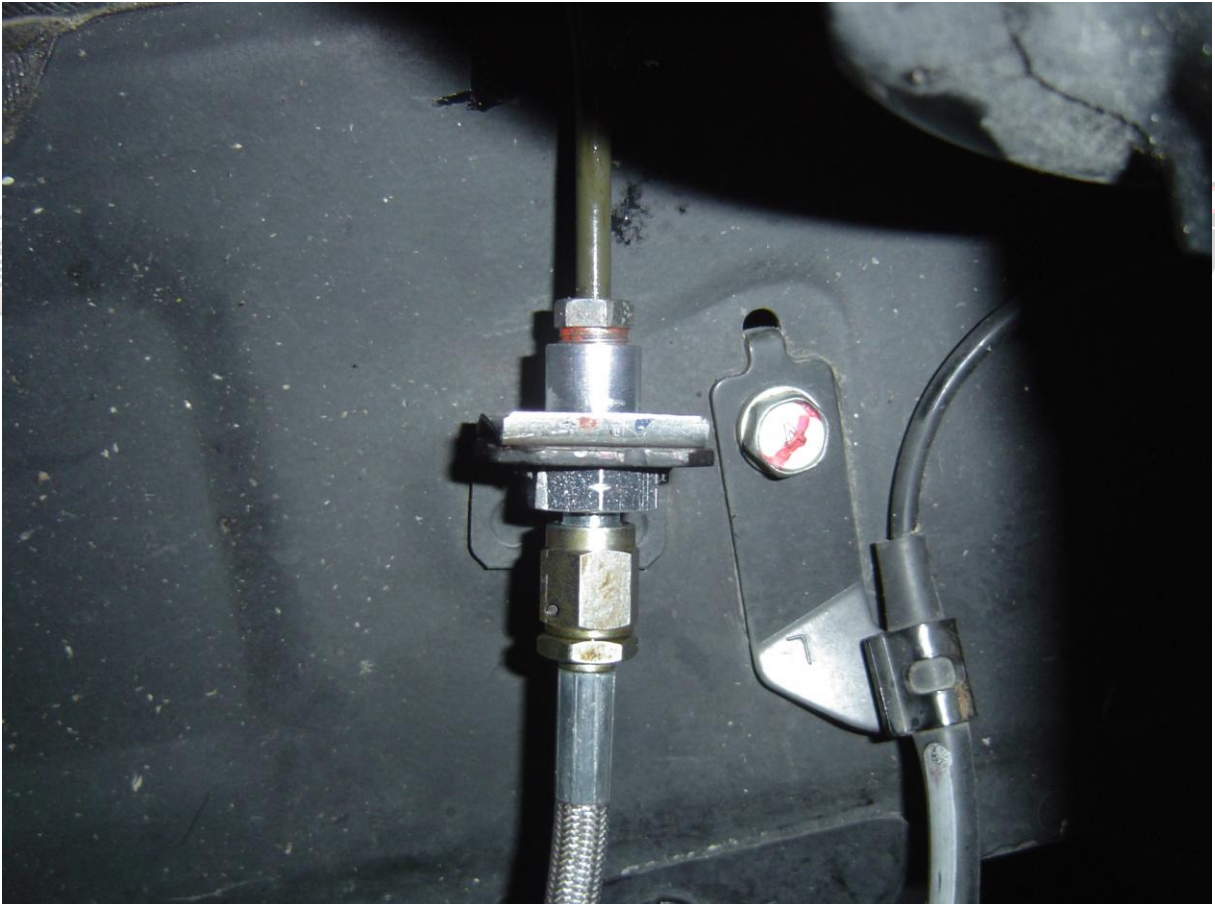

8. Install the brake lines and route them as shown in the picture and hold in place using factory clips.



9. Bleed the brakes and check for leaks.